

Can Bus Wire colours

When altering link position to change vehicle type power must be removed from converter else change will not occur this is as simple as removing plug from front of converter for 10 seconds

WITH NO JUMPER CONVERTER WILL TRY TO AUTOMATICALLY FIND CAR TYPE (PREFERED WAY IS USE JUMPER FOR SELECTION)
YOU CAN SELECT YOUR CAR TYPE MANUALLY WITH JUMPER

